## **SENTAI**



LA1-D11 (NEW)



LA1-D22 (NEW)

## **LA1-D series Contactor Blocks**

## **APPLICATION**

LA1-D series auxiliary contact blocks are installed at the top of LA2-D control relay or LC1-D contactor for expanding the couples of auxiliary contacts points. Owing to adopt the contacting functions of sliding friction, the item can be selfcleaning & ensure the electric circuit to be reliable.

## TECHNICAL SPECIFICTION

Туре	LA1-D	LA1-D11	LA1-D20	LA1-D22	LA1-D40	LA1-D04	LA1-D13	LA1-D31
Contact number	2NC	NO+NC	2NO	2NO+2NC	4NO	4NC	1NO+3NC	3NO+1NC



LA1-D11



LA1-D22